


ASSEMBLY INSTRUCTIONS: LOCKING SPRING

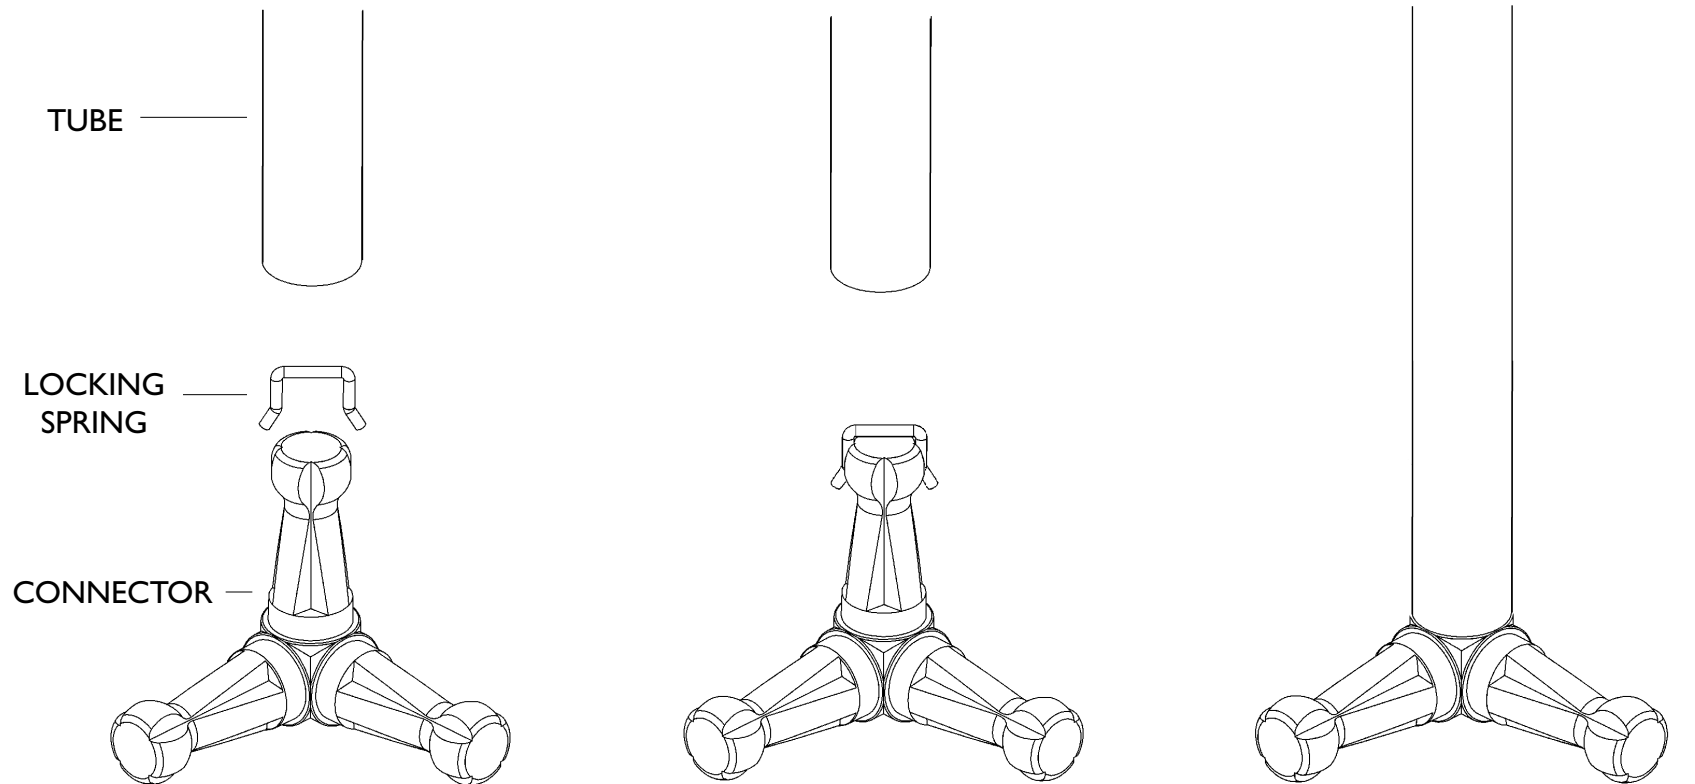

1. Place locking spring into the grooves on the head of the connector.

2. Align tube over head. Hold tube firmly against spring.

3. Hammer tube onto the head using a soft-faced hammer.



abstracta[®]
design poul cadovius